


## CBHD3 24/25 - DIPSWITCH SETTINGS

### BTI PART # 190.2425XX01

Dipswitches are located behind the front label on the charger near the leds. You will find 2 sets of dipswitches (SW1 and SW2).

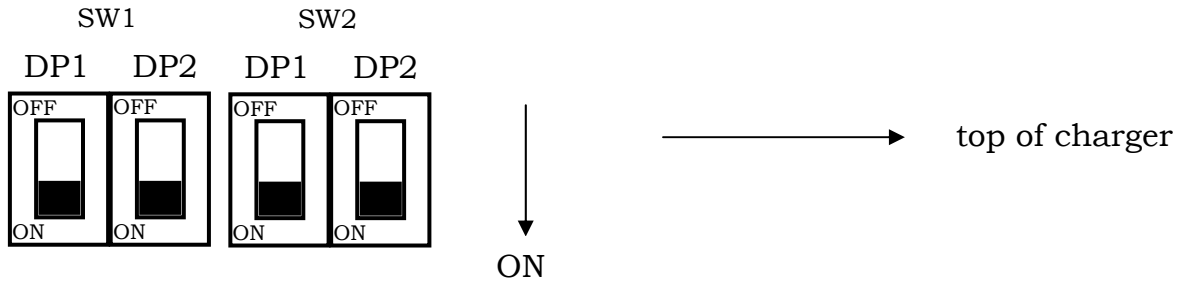

The set of 2 dipswitches SW1 adjust the charging curve as shown in the table below.

DIPSWITCH: **SW1**

DP1	DP2	CHARGING CURVE	LED Validation on Start-Up
ON	OFF	IUIa-ACD (#1) <b>(default)</b>	Red led blinks twice
OFF	OFF	IUUo-agm (#5)	Green led blinks twice
OFF	ON	IUUo-gel (#6)	Red and Yellow leds blink twice
ON	ON	IUIUo-agm (#14)	Red and Green leds blink twice

The set of 2 dipswitches SW2 adjust current and voltage according to the table below.

DIPSWITCH: **SW2**

DP1	CHARGING CURRENT
ON	15A
OFF	25A <b>(default)</b>

DP2	BATTERY VOLTAGE
ON	12V
OFF	24V <b>(default)</b>

Once you have finished configuring the charger with the desired charging curve, current and voltage replace the label and put an indicator of the new setting on the label.

FW: CBHD3NC\_BTI\_190.24250406\_NOTEST